


Type 2

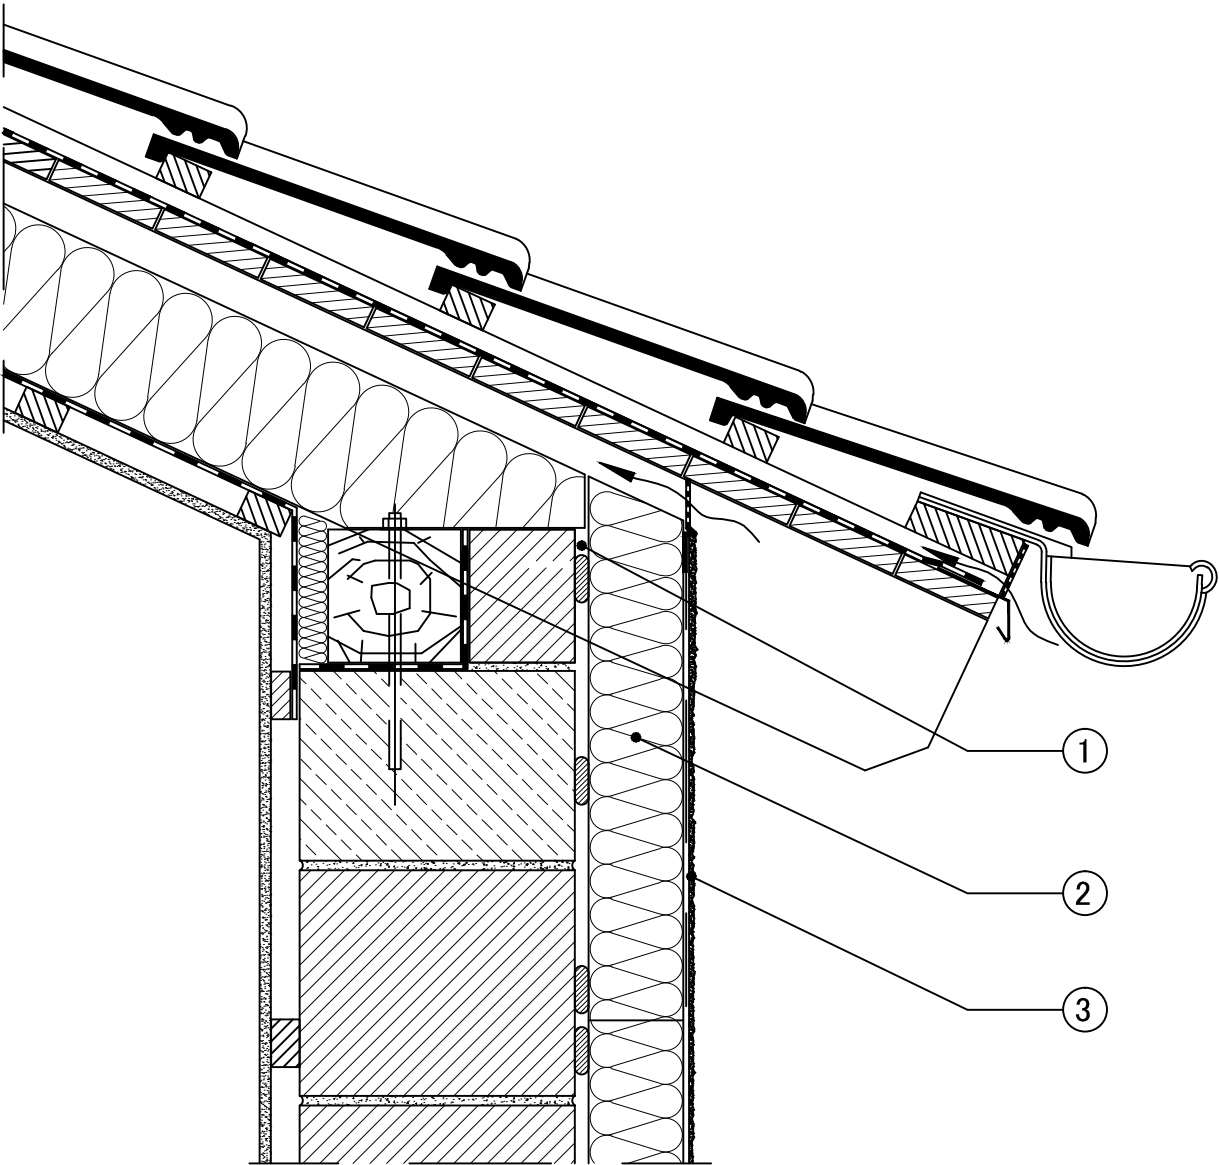

- 1. Insulation is extended up into the roof caves (that are adapted) beyond the soffit line to ensure continuous insulation and no thermal breaks.
- 2. Soffit underside adjusted.
- 3. Basecoat and Topcoat.

DRAWING TITLE: EWI Abutment to roof soffit with sufficient roof overhang Where EWI is installed into and amended soffit profile.



EWI Pro Insulation Systems LTD.  
Kingston Bussines Centre Unit1  
Fullers Way South  
Chessington KT9 1DQ

DRAWING No: EP - 049

DATE: 09-02-2022

SCALE: NTS

REFERENCES:  
WRD-E001